


INSTALLATION STEPS




STEP 1

Place Recessed Shower Cube level at desired location with flange facing out. When positioning the unit, make sure Shower Cube located between the 2" by 4" framing members.

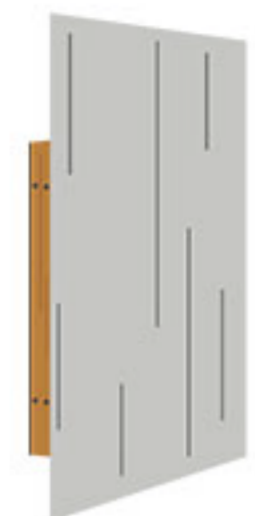


STEP 2

Then place the backboard/cement board/drywall on the stud.

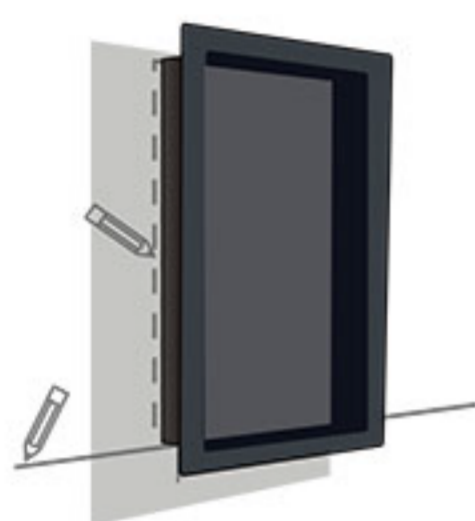

STEP 3

Trace the rough-in size around the entire niche. Allow an additional 1/8" (3.2 mm) to allow room for adjustment.

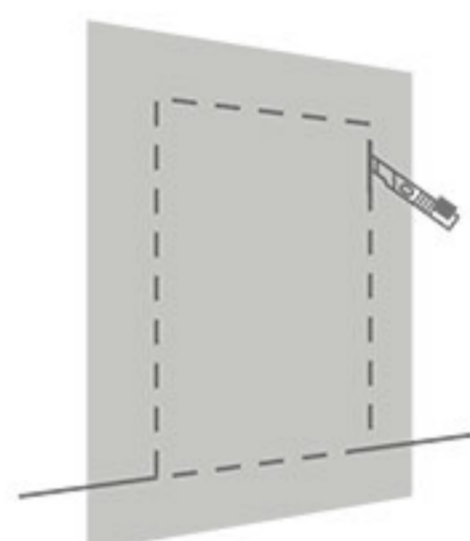


STEP 4

Cut out substrate from traced lines. Avoid cutting framing members, water lines electrical wires, etc.



STEP 5

Place your niche into the cut out substrate to ensure fitting. Use a leveling tool to ensure correct alignment.

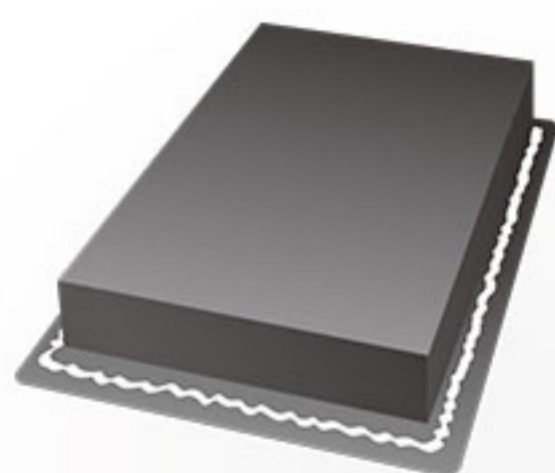


STEP 6

Apply a continuous bead of silicone adhesive caulking on the back of the mounting flange.



STEP 7

Fix the niche to the opening using M4x15 countersunk tapping screws. Be careful not to over tighten the screw.

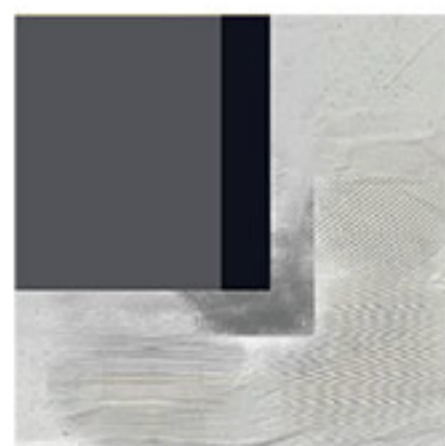

STEP 8

Skim a coat of polymer modified thin-set mortar around the edge of the niche to "feather" out the flange to the substrate.



STEP 9

Apply thin set to the niche and back butter tile with polymer modified thin-set mortar to ensure full contact. Allow a longer setting time for tile to adhere to the surface.

(Notes: Please have the top tile/stone cut in 45° by the 2 ends to keep the tile/stone in place to prevent the tile/stone from drop-off)